2A ALERTER QUICK GUIDE									
STAT	LIGHTS				COMMENTS				
	Α	В	С	D					
POWER ON	•	•	•	•	Insert battery. Alerter turns on				
ON		*		•	Alerter On. Call B enabled				
BAT		*			Low pitch tone, battery low				

- TURNING ALERTER OFF

 Press and hold alerter button.

 The LEDs progressively extinguish.

 Keep holding button until OFF LED blinks once and a low pitch tone is generated.

 TURNING ALERTER ON

- Press and hold alerter button for 5 seconds.
 Release button when alerter starts beeping.
 Power on confidence tone generates and all LEDs illuminate.
 Note: after turning on alerter all call types will be enabled.

CALL TYPE	LIGHTS			TONE TYPE	VIB	CALL TYPE (NAME)	
	Α	В	С	D			
FIRE	•				DUAL	YES	
FIRE		•			DUAL	YES	
FIRE			•		DUAL	YES	
TEST				•	BIP	NO	TEST

RECEIVING A CALL

- When a call is received, note the call type and press alerter button to reset the call.

 Calls do not need to be deleted following receipt.

 If a call has been received but not reset, the alerter will periodically prompt you by producing a 'bip' tone to indicate that a call has been received.

 Press the button to retrieve the missed call.

2A ALERTER SELECTIVE CALLING

Your 2A alerter has been configured so that you may switch between different pump appliances or any additional programmed services.

TO CONFIRM CURRENT SETTING (STATUS)

- Press and immediately release button.
 The alerter displays current mode,
 (ON, MUTE or OFF) Fig 1, followed
 by flashing the LED/s corresponding
 to the call type enabled, Fig 2.



Fia 1

Figure 2 shows that the 2A has been led to receive alerts relating to call type B. B flashes three times).
Other calls (except test) will not be received.

At anytime the 2A may be checked to verify which call type is enabled by repeating the above.



- Press and hold the alerter button. extinguishes.
- Keep holding button until you reach the ON LED. Then release the button. (There is plenty of time to release the button as each LED pip lasts for 2 seconds and you do not



- need to release the button when the LED is actually lit).

 The alerter first confirms the currently selected call type by flashing the appropriate LED three times.

 The LED then illuminates constantly.

 Repeatedly press and release button to select the next call type.

 Stop when appropriate call type has been chosen.

SWITCHING TO ANOTHER CALL TYPE

- Stop when appropriate call type has been chosen
 After 4 seconds the alerter will flash your selected call type and return to standby.
- Check that the correct call type has been selected by pressing and releasing the button.

